

## Safety tips:

There are things that you can do to reduce risk in your home.

- Move beds, cots and furniture away from the window.
- Do not let cords or chains hang loose. Make sure they are kept out of reach of children at all times.
- Do not tie loose cords and chains together.
- Check the condition of all safety devices if not used regularly and replace if the device is faulty.

## Operating your blind:

Operating your blind is easy. Just follow these instructions.

- To adjust the angle of the louvres, twist the wand.
- To raise the blind, ensure the louvres are open, pull the cord down across the front of the blind until it's at the required position, and lock into place by moving the cord away from the blind.
- To lower the blind, release the cord by moving it away from the blind, then let the cord slide through your fingers.

# 35/50mm Venetian blind

## How to fit and use your Child Safety Devices

1

### Warning

Blinds can be potentially dangerous to small children. Please be aware that swallowing small parts can cause internal asphyxiation. Looped or low hanging cords, chains or tapes can create hazardous loops which could lead to the risk of strangulation. We do everything we can to ensure your chosen product is child safe. As a minimum all of our blinds meet the European Standard BS EN 13120 for safety. Our instructions and the supplied Child Safety device(s) are intended for you to ensure that your blind is as safe as possible.

The information below gives guidance for fitting the provided child safety devices. All safety devices must be correctly installed for the protection from strangulation of young children and the proper use of the blind. Please read the instructions carefully and keep safe for future reference.

Only use the devices and cords provided with your blind. Videos showing how to fit and reconnect child safety devices are available, along with replacements at [www.makeitchildsafe.co.uk](http://www.makeitchildsafe.co.uk).

2

### Fitting the safety cleat

Blinds that require a safety cleat must not be installed less than 1.5m from the floor. Safety cleats are designed to keep cords taut and out of reach of children – always wrap the cord around the cleat.

Fix the safety cleat to the wall with 2 screws in a position that's out of reach of children. Install it as close to the head rail as possible, ensuring that it is no closer to the floor than 1.5m. See fig. 1.



fig 1

If more than one cleat is required for the complete amount of cord to be wrapped around, ensure that they are positioned no further apart than 20cm and both are no closer to the floor than 1.5m.

3

### To re-connect the breakaway safety tassel

Note - the safety tassel is designed to come apart to remove a hazardous loop.

Should your device become separated, any free cords should be placed into one of the holes that are formed when the two halves of the tassel are put together. See fig. 1 and 2.

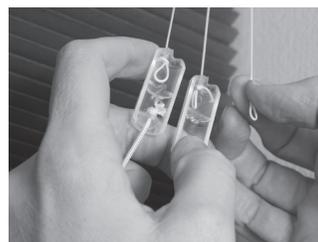


fig 1



fig 2



fig 3