

Safety tips:

There are things that you can do to reduce risk in your home.

- Move beds, cots and furniture away from the window.
- Do not let cords or chains hang loose. Make sure they are kept out of reach of children at all times.
- Do not tie loose cords and chains together.
- Check the condition of all safety devices if not used regularly and replace if the device is faulty.

Operating your blind:

Operating your blind is easy. Just follow these instructions.

- Pull the blind up and down using the cord. You will need to fit the cleat into a suitable location to wrap the cord around to secure the blind in place.

Roman blind (Standard)

How to fit and use your Child Safety Devices

1

Warning

Blinds can be potentially dangerous to small children. Please be aware that swallowing small parts can cause internal asphyxiation. Looped or low hanging cords, chains or tapes can create hazardous loops which could lead to the risk of strangulation. We do everything we can to ensure your chosen product is child safe. As a minimum all of our blinds meet the European Standard BS EN 13120 for safety. Our instructions and the supplied Child Safety device(s) are intended for you to ensure that your blind is as safe as possible.

The information below gives guidance for fitting the provided child safety devices. All safety devices must be correctly installed for the protection from strangulation of young children and the proper use of the blind. Please read the instructions carefully and keep safe for future reference.

Only use the devices and cords provided with your blind. Videos showing how to fit and reconnect child safety devices are available, along with replacements at www.makeitchildsafe.co.uk.

2

Fitting the safety cleat

Blinds that require a safety cleat must not be installed less than 1.5m from the floor. Safety cleats are designed to keep cords taut and out of reach of children – always wrap the cord around the cleat.

Fix the safety cleat to the wall with 2 screws in a position that's out of reach of children. Install it as close to the head rail as possible, ensuring that it is no closer to the floor than 1.5m. See fig. 1.



fig 1

If more than one cleat is required for the complete amount of cord to be wrapped around, ensure that they are positioned no further apart than 20cm and both are no closer to the floor than 1.5m.

3

To reconnect the inner cord breakaway clip

1. The inner cord breakaway clip is attached to the cord and the tape on the reverse of the blind. The clip will breakaway in two parts if any reasonable weight is placed between the cord and the back of the blind.
2. One inner cord breakaway clip will be used on each cord where it crosses a tape. See fig. 1.



fig 1

3. If the clip breaks apart, push the small c-clip section (which will remain on the cord) onto the front of the post part (which will remain on the tape). See fig. 2.



fig 2

To re-connect the breakaway safety tassel

Note - the safety tassel is designed to come apart to remove a hazardous loop.

Should your device become separated, any free cords should be placed into one of the holes that are formed when the two halves of the tassel are put together. See fig. 1 and 2.

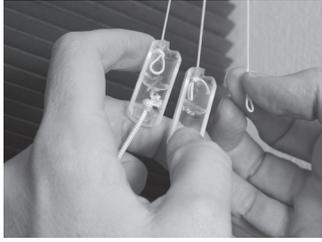


fig 1

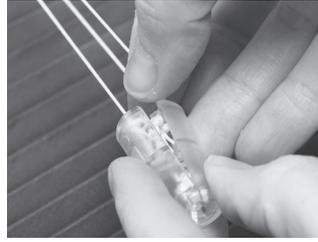


fig 2



fig 3